


ANCHOR DETAIL

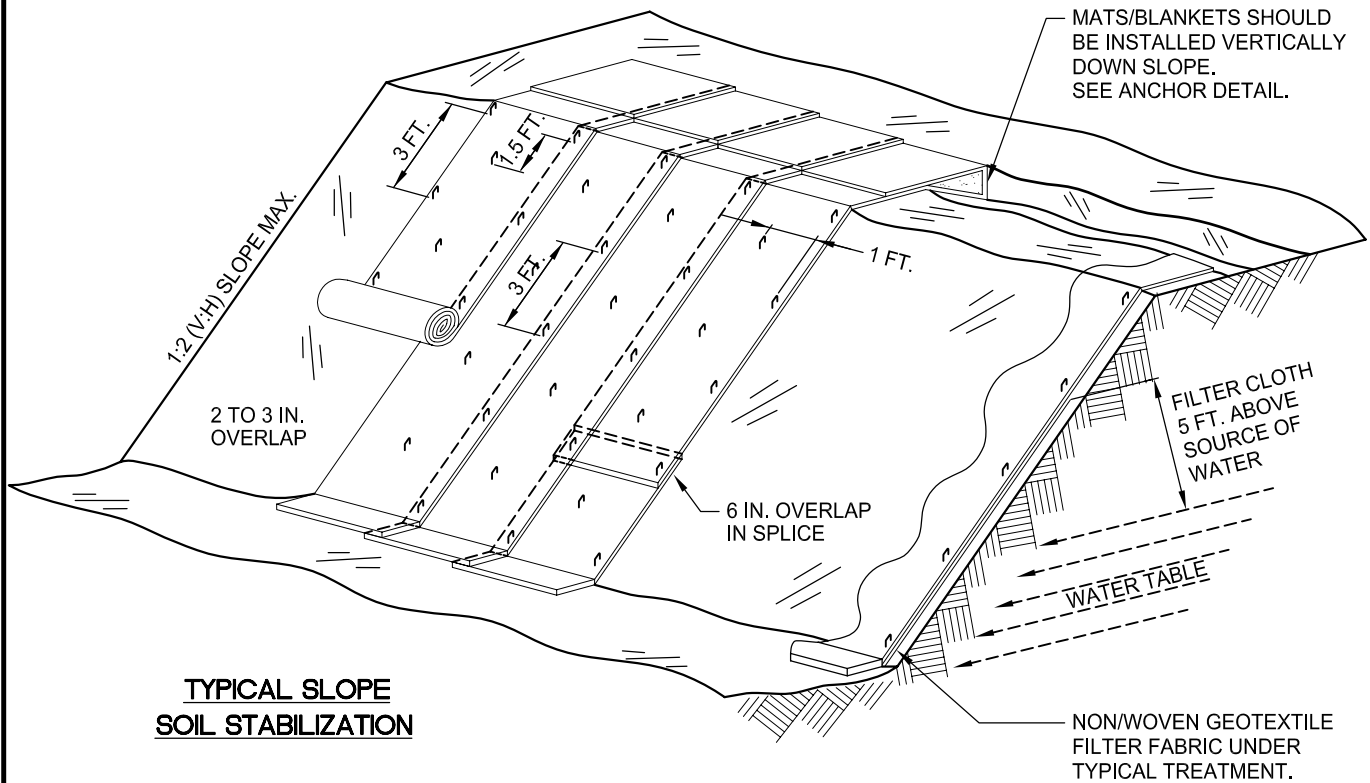

**TYPICAL SLOPE
SOIL STABILIZATION**

WET SLOPE LINING

NOTES:

- 1.- SLOPE SURFACE SHALL BE FREE OF ROCKS, CLODS, STICKS AND GRASS. MATS/BLANKETS SHALL HAVE GOOD SOIL CONTACT.
- 2.- LAY BLANKETS LOOSELY AND STAKE OR STAPLE TO MAINTAIN DIRECT CONTACT WITH THE SOIL. DO NOT STRETCH.
- 3.- INSTALL PER MANUFACTURER'S RECOMMENDATIONS.

REV.	DATE	DESCRIPTION

R:\Utilstds\City_Std_Details\Wtr_Quality_Details\Q_90_ErosionControlBlanquets.Dwg